



www.grainsystemsdistribution.com



3hp High-Pressure Blower Assembly & Operations Manual



Rotation of motor & wheel on KLEENair Blower

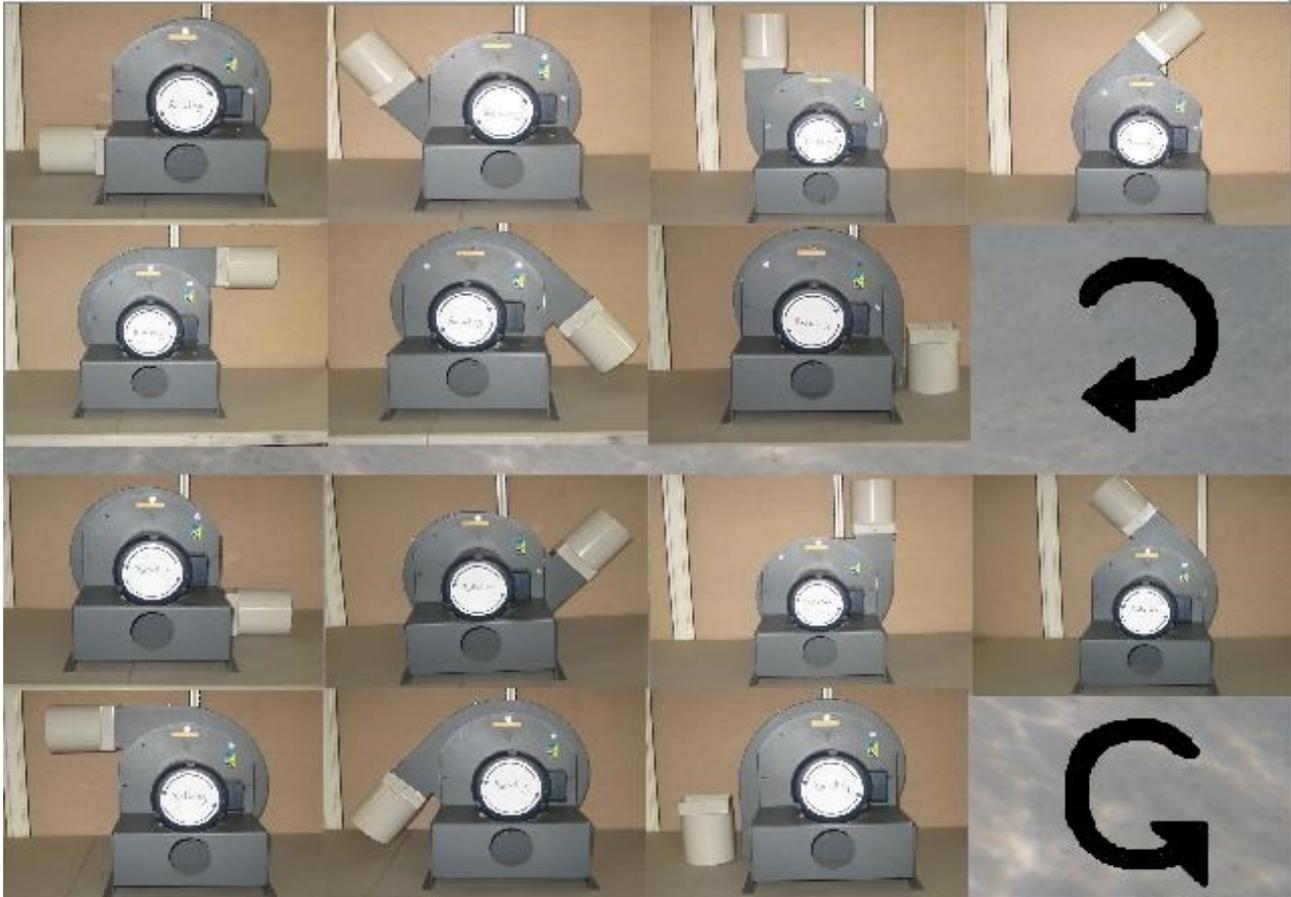


Table of Contents

Introduction	4
Safety	5
Assembly	8-11



Attached to a GSI Dryer



Attached to an MC Dryer



Attached to a FF X-Stream Dryer



Attached to a Sukup Dryer

Introduction

General Information

READ THIS MANUAL carefully to learn how to properly use and install equipment. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your equipment and should be easily accessible when needed.

Receiving Merchandise and Filing Claims

INSPECT the shipment immediately upon arrival. The customer is responsible for ensuring that all quantities are correct. Report any damage or shortages by recording a detailed description on the bill of lading to justify the claim from the transport firm. When receiving merchandise, it is important to check both the quantity of parts and their descriptions with the packing list enclosed within each package. All claims for freight damage or shortage must be made by the consignee within ten (10) days from the date of the delivery. The consignee should accept the shipment after noting the damage or loss.

Capacity

A. The capacities may vary greatly under varying conditions. The following factors play a role in the performance of the KLEENair Vacuum Grain Screener.

- Speed/rpm
 - Angle of operation
 - Moisture content
 - Amount of foreign matter
 - Different materials
 - Methods of feeding
-

Safety

Safety Instructions

Our foremost concern is your safety and the safety of others associated with this equipment. We want to keep you as a customer. This manual is to help you understand safe operating procedures and some problems which may be encountered by the operator and other personnel.

As owner and/or operator, it is your responsibility to know what requirements, hazards and precautions exist, and to inform all personnel associated with the equipment or in the area. Safety precautions may be required from the personnel. Avoid any alterations to the equipment. Such alterations may produce a very dangerous situation where **SERIOUS INJURY** or **DEATH** may occur.

This equipment shall be installed in accordance with the current installation codes and applicable regulations which should be carefully followed in all cases. Authorities having jurisdiction should be consulted before installations are made.

Follow Safety Instructions

Carefully read all safety messages in this manual and safety signs on your machine. Keep signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from the manufacturer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machinery in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and effect machine life.

If you do not understand any part of this manual or need assistance, contact your dealer.

Operate Motor Properly

To avoid serious injury or death, stay away from unit and make sure everyone is clear of the equipment before starting or operating the unit.

All electrical connections should be made in accordance with the National Electric Code. Be sure equipment and bins are properly grounded.

Do not operate electric motor equipped units until motors are properly grounded.

Disconnect power on electrical driven units before resetting motor overloads.

Do not repetitively stop and start the drive in order to free a plugged condition. Jogging the drive in this manner can damage the equipment and/or drive components.



Read and Understand Manual



Electric Shock Hazard

Safety Continued

Operate Unload Equipment Properly

- Untrained operators subject themselves and others to **SERIOUS INJURY** or **DEATH**. **NEVER** allow untrained personnel to operate this equipment.
- **NEVER** work alone.
- Keep children and other unqualified personnel out of the working area at **ALL** times.
- Make sure **ALL** equipment is locked in position before operating.
- **NEVER** start equipment until **ALL** persons are clear of the work area.
- Keep hands and feet away from the auger intake and other moving parts.
- **NEVER** attempt to assist machinery operation or to remove trash from equipment while in operation.
- Be sure all operators are adequately rested and prepared to perform all functions of operating this equipment.
- **NEVER** allow any person intoxicated or under the influence of alcohol or drugs to operate the equipment.
- Make sure someone is nearby who is aware of the proper shut down sequence in the event of an accident or emergency.
- **ALWAYS** think before acting. **NEVER** act impulsively around the equipment.
- **NEVER** allow anyone inside a bin, truck or wagon which is being unloaded by an auger or conveyor. Flowing grain can trap and suffocate in seconds.
- Use ample overhead lighting after sunset to light the work area.
- Keep area around intake free of obstacles such as electrical cords, blocks, etc., that might trip workers.
- **NEVER** drive, stand or walk under the equipment.



Safety Continued

Prepare for Emergencies

Be prepared if fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.



Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Remove all jewelry.

Long hair should be tied up and back.

Safety glasses should be worn at all times to protect eyes from debris.

Wear gloves to protect your hands from sharp edges on plastic or steel parts.

Wear steel toe boots to help protect your feet from falling debris. Tuck in any loose or dangling shoe strings

A respirator may be needed to prevent breathing potentially toxic fumes and dust.

Wear hard hat to help protect your head.

Wear appropriate fall protection equipment when working at elevations greater than six feet (6')



Assembly

Assemble 3 hp Blower Kit

1. Remove the outer cover that has the 7" round opening. There should be a sticker on the outside that says "Reverse to Assemble." Remove packing materials and propeller.
2. Remove the propeller housing and rotate to the desired direction that you wish to discharge the screenings. If the discharge is already pointing in the desired direction then skip to the next step.

NOTE: Make sure the rotation of the blower wheel is moving air out the blower as indicated on page 2. The direction of the blower can be rotated to 8 different settings. A second option is to reverse the housing on the blower to the opposite side for 8 additional settings, but in doing so you will need to reverse the motor direction as well. For fan inverted for ceiling suspension, or side mounting, direction of rotation and discharge is determined when fan is resting on the floor.

3. Bolt the motor on to motor mount (hardware bag supplied). **NOTE:** The retaining key is taped to the housing of the motor.
4. Slide the propeller onto the motor shaft (see figure 1) and insert key into key-way. Tighten allen screws (2) onto the motor shaft. Propeller should spin freely without rubbing on housing.
5. Install outer cover with 7" flange facing out. (see figure 2)

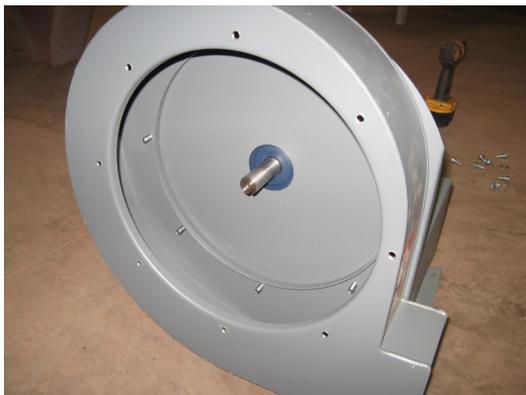


Figure 1



Figure 2

Assembly Continued

Assemble Suction Hose

- Slide the 2' x 6" flex hose about half way onto the 6" x 6" galvanized tube. Fasten in place with 4-1/8-7" hose clamp. (see figure 3)
- Slide the other end of the 6" x 6" galvanized tube into the 6" side of the 7" to 6" reducer. Fasten in place with a 4-1/8-7" hose clamp. (see figure 4)



Figure 3



Figure 4

- Attach the 7" opening of the 7" to 6" reducer to the 7" flange opening of the blower. Fasten in place with the large hose clamp. (see figure 5)



Figure 5

Assembly Continued

9. Attach the other end of the 2' x 6" flex hose to either side of the KLEENair hopper. Fasten in place with 4-1/8–7" hose clamp (see figure 6). Attach the red tube cover onto the other side of the hopper.



Figure 6

Note: It is recommended that there be a small bend in the flex hose between the blower and the KLEENair. This helps keep the velocity of the screenings lower to maximize propeller life.

10. Attach the square-to-round adapter to the discharge on the blower using the two (2) small self-taping screws provided. (see figure 7)



Figure 7

Assembly Continued

Assemble Blower Kit



Complete blower assembly



Completed Assembly

18. Attach tubing (not supplied) to the discharge transition on the blower.

4" galvanized tubing recommended for 1 HP blower

6" galvanized tubing recommended for 3 HP blower

WARNING: Using plastic or PVC tubing will cause static electricity and possible electrocution or fire.

- It is recommended to run discharge tubing horizontally or vertically.
- Elbows should have larger than 24" radius.
- Running tubing at an incline can effect blower capacity.



GRAIN SYSTEMS DISTRIBUTION
7702 E STATE ROAD 356
OTWELL, INDIANA 47564
812-354-2496

GRAIN SYSTEMS DISTRIBUTION
1104 INDUSTRIAL PARK ROAD
ROCK FALLS, ILLINOIS 61071
815-625-2838

GRAIN SYSTEMSDISTRIBUTION
601 N OLD ST RD 15
MILFORD, INDIANA 46542
574-831-4120